

WIRE FEED POSITIONERS



Product Introduction

Wire Feeder Positioners


AMET is pleased to provide the following product introduction on our standard models of wire feeder positioners. These wire feeders are designed to hold and position the wire feed tips on cold wire feeders.

AMET offers our wire feeder positioners in 3 models, the WP-MAN-B, the WP-MAN-JB and the WP-MOT. Each model is supplied with a "V" block assembly so they can be mounted to the torch or another mounting device.

On each model, the wire positioner includes at least two axis of adjustment that can be changed conveniently during welding.


WP-MAN-B Wire Positioner

The WP-MAN-B is our basic wire positioner. The operator has several adjustments available, but only two axis are easily adjustable during welding.

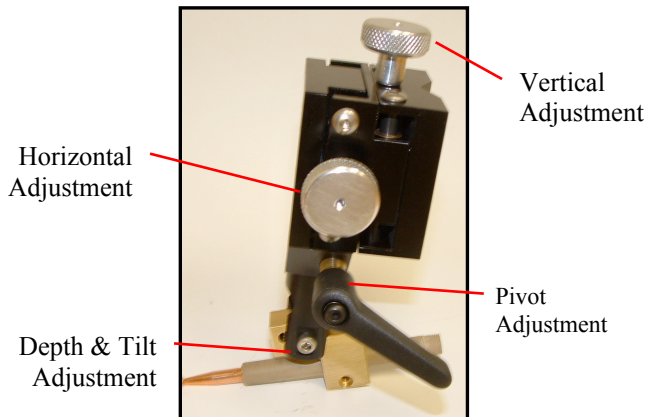


This manual wire positioner is equipped with two knobs, which allow the operator to adjust the vertical and horizontal position of the wire entry point. The wire positioner also has two other "fixed" adjustment points. One is the pivot adjustment, which allows the operator the ability to pivot or swing the wire entry point from centerline. The other adjustment point allows the operator two adjustments. The lower adjustment allows the operator to tilt the wire and also set the depth of the wire entry point.

Optional 3-roll wire straightener

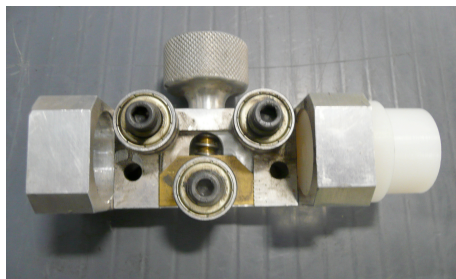

WP-MAN-JB Wire Positioner

The WP-MAN-JB is our premier manual wire positioner. The operator has several adjustments available, and all of them are easily adjustable during welding.

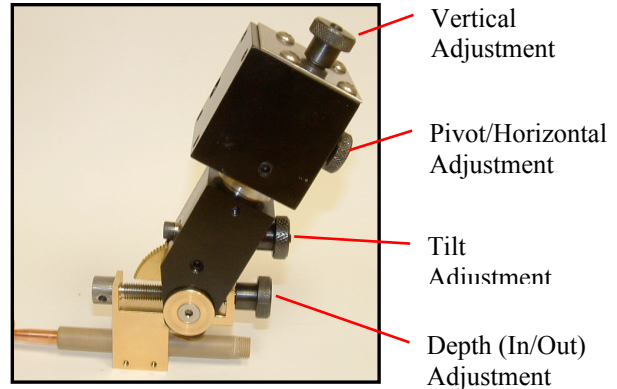

This premier manual wire positioner is equipped with four knobs, which allow the operator to adjust the following:

1. Vertical (Up/Down) position of the wire
2. Pivot angle of the wire entry, which can also be considered a left/right horizontal position adjustment
3. Tilt angle of the wire entry
4. Depth adjustment that allows the operator to move the wire entry position in and out of the weld puddle.

WP-MOT Motorized Wire Positioner

The WP-MOT is our compact motorized wire positioner. The operator has two motorized adjustments available, and a "knuckle" adjustment available. The two motorized adjustments have manual override knobs, which can be used when power is not applied to the motors. The knuckle allows the operator to adjust the tilt and pivot angle of the wire entry.

